


Movement 5030.D

User's Manual English

Swiss Made Chronograph Excellence

The Ronda 5030.D represents the essence of Swiss chronograph precision. With multi-function counters and date display, it delivers accurate and refined performance for watches with a bold and sophisticated personality.

Description of the display and control buttons

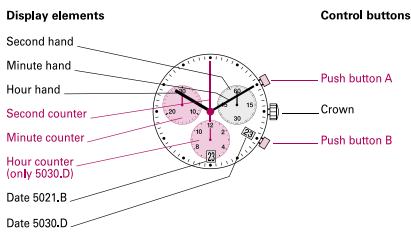

01

Setting the time

- Pull out the crown to position III (the watch stops).
- Turn the crown until you reach the correct time 8:45.
- Push the crown back into position I.

Please note:
* In order to set the time to the exact second, **1** must be pulled out when the second hand is in position :50-.
Once the hour and minute hands have been set, **3** must be pushed back into position I at the exact second.

02

Setting the date (quick mode)

- Pull out the crown to position II (the watch continues to run).
- Turn the crown until the correct date **1** appears.
- Push the crown back into position I.

Please note:
During the date changing phase between approx. 9 PM and 12 PM; the date must be set to the date of the following day.

03

Setting the date/time following a battery change

- Pull out the crown to position II (the watch continues to run).
- Turn the crown until yesterday's date appears **3**.
- Pull out the crown to position III (the watch stops).
- Turn the crown until the correct date **4** appears.
- Continue to turn the crown until the correct time 8:30 PM appears.
- Push the crown back into position I.

Please note:
* To set your watch to the exact second, please refer to the chapter entitled 'setting the time'.
**Please observe the AM/PM clock rhythm.

04

Chronograph: Basic function (Start / Stop / Reset)

Example:

- Start:** Press push-button A.
- Stop:** To stop the timing, press push-button A once more and read the chronograph hands: **1h / 20min / 38 sec.**
- Zero positioning:** Press push-button B. (The chronograph hands will be reset to their zero positions.)

05

Chronograph: Accumulated timing

Example:

- Start:** (start timing)
- Stop:** (e.g. 15 min 5 sec following **1**)
- Restart:** (timing is resumed)
- Stop:** (e.g. 5 min 12 sec following **3**) = **20 min 17 sec**
(The accumulated measured time is shown)
- Reset:** The chronograph hands are returned to their zero positions.

Please note:
* Following **4**, the accumulation of the timing can be continued by pressing **push-button A** (Restart / Stop, Restart / Stop, ...).

06

Chronograph: Intermediate or interval timing

Example:

- Start:** (start timing)
- Display interval:** e.g. 20 minutes 17 seconds (timing continues in the background)
- Making up the measured time:** (The chronograph hands are quickly advanced to the ongoing measured time.)
- Stop:** (final time is displayed)
- Reset:** The chronograph hands are returned to their zero position.

Please note:
* Following **2**, further intervals or intermediates can be displayed by pressing **push-button B** (display interval / make up measured time, ...).

07

Adjusting the chronograph hands to zero position

Example:
One or several chronograph hands are not in their correct zero positions and have to be adjusted (e.g. following a battery change).

- Pull out the crown to position III (all chronograph hands are in their correct or incorrect zero position).
- Keep push-buttons **A** and **B** depressed **simultaneously** for at least 2 seconds (the second counter hand rotates by 360° → corrective mode is activated).

Adjusting the second counter hand
Single step: **A** 1 x short
Continuous: **A** long

Adjusting the next hand B

Adjusting the hour counter hand at 5030.D (position 6h)
Single step: **A** 1 x short
Continuous: **A** long

Adjusting the next hand B

Adjusting the minute counter hand (position 9h)
Single step: **A** 1 x short
Continuous: **A** long

- Returning the crown to position I
Termination of the chronograph hands adjustment (can be carried out at any time).

08

